

Engine suspension: The traction engine is suspended on coil springs for smoothness, the mount that is most crucial is the front engine mount, this locates the engine, it is vital that this mounting is in good condition and that the plate it is mounted in is tight where it is bolted into the front cradle. This can be the cause of clutch shudder if this mount is defective. Engine height is adjustable on the side mountings, this should be carried out as per the manual with the rear mounting case removed from the firewall. After completing the height adjustment re-fit the rear mounting case in the firewall as per the instructions.