

— ELECTRICAL — — WIRING DIAGRAM —

- 1. Headlamp R.H.
- 2. Headlamp L.H.
- 3. Horn R.H.
- 4. Horn L.H.
- 5. Junction box, front R.H.
- 6. Junction box, front L.H.

- 7. Wing lamp R.H.
- 8. Wing lamp L.H.
- 9. Dynamo.
- 10. Stop lamp switch.
- 11. Spark plugs.
- 12. Distributor.


- 13. Ignition coil.
- 14. Inspection lamp socket, R.H.
- 15. Inspection lamp socket, L.H.
- 16. Starter motor.

- 17. Battery, 6 volt, 90 amp.h.
- 18. Windscreen wiper.
- 19. Junction box.
- 20. Ignition switch.
- 21. Panel lights switch.
- 22. Ammeter.

- 23.
- 24. Petrol gauge.
- 25. Panel lights.
- 26. Wing lamps switch.
- 27. Trafficator switch.
- 28. Horn and lighting switch.

- 29. Interior lamp.
- 30. Trafficator R.H.
- 31. Trafficator L.H.
- 32. Petrol gauge tank unit.
- 33. Tail lamp.

- 34. Stop lamp.
- 35. Ducellier regulator.
- 35 bis. Citroen regulator.
- 36. Two-pole junction box.
- 37. Map lamp.

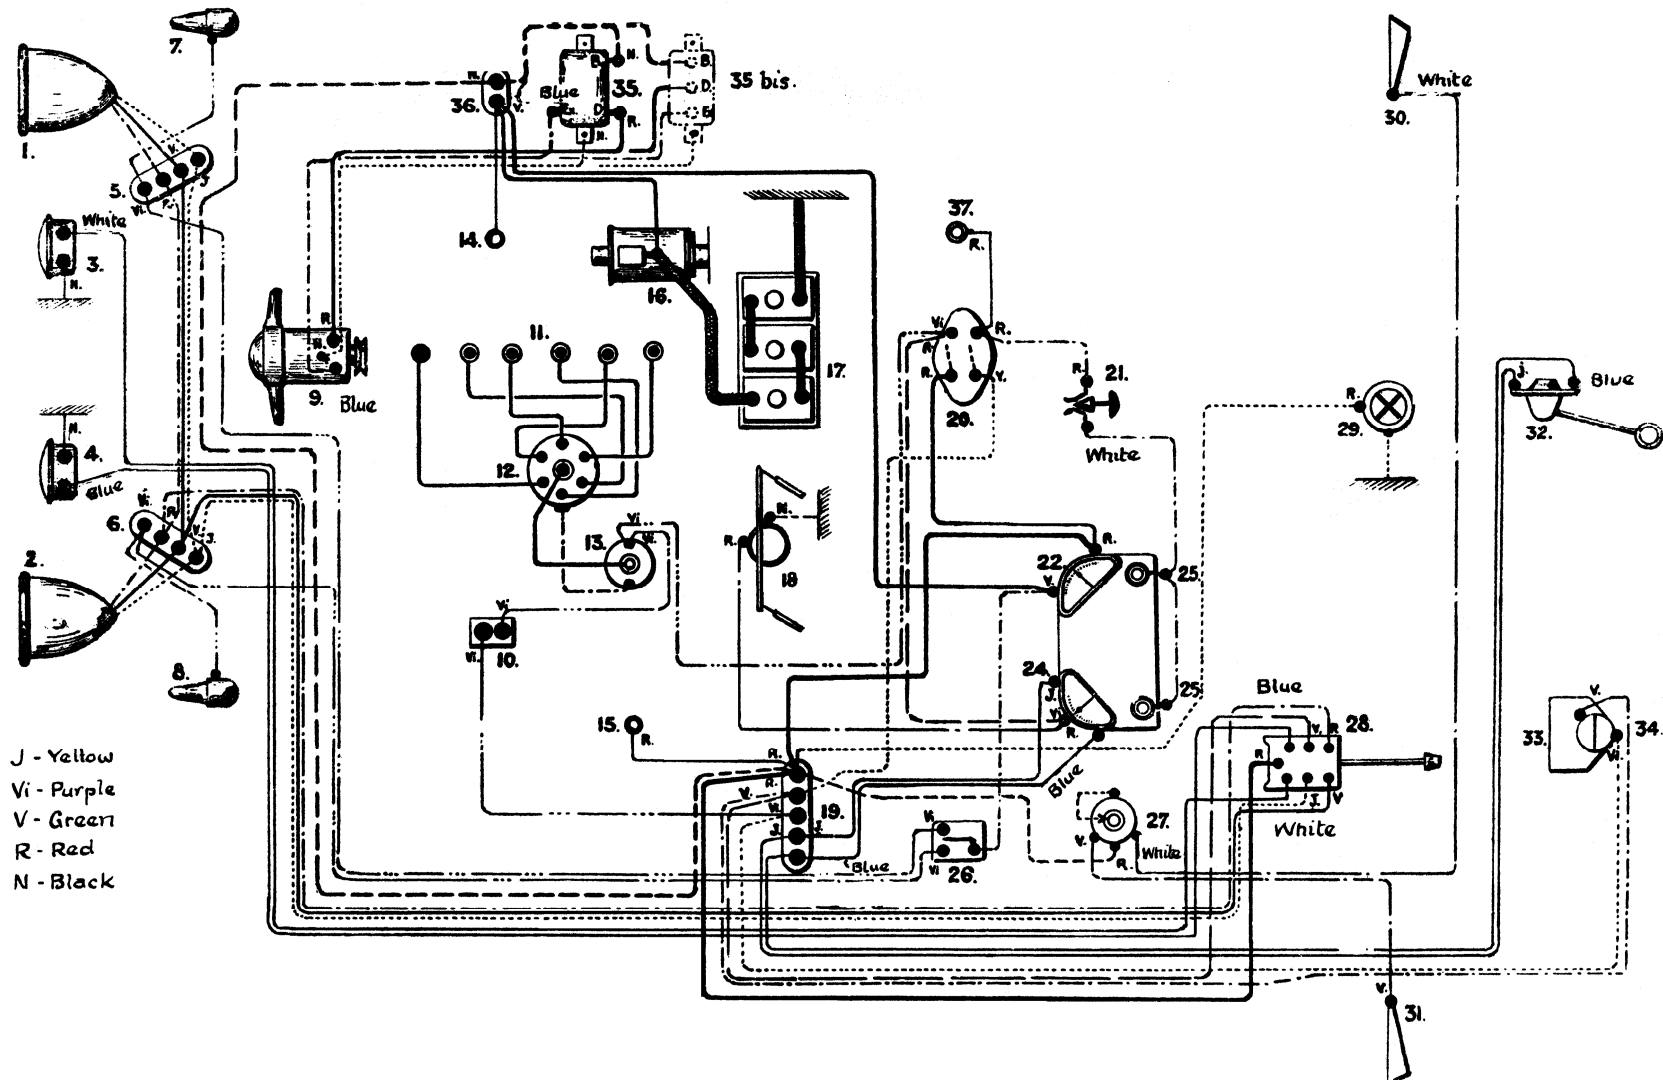

J - Yellow
 Vi - Purple
 V - Green
 R - Red
 N - Black